



## Autocar New Dash Display Settings

# Autocar New Dash Default Display

- The default setting for the new Autocar ACX dash display is NONE.
- With FMM set to NONE there will not be a fuel level shown on the main screen.



# Display Set to MOMENTUM CAN

- With the display set to MOMENTUM CAN there will be a fuel level on the left side of the display.



# Setting Display to FMM MOMENTUM CAN

- Settings are modified using the Menu Control Switch
- It is located in near the key switch
- It consists of 5 buttons and a knob
- The knob is used to scroll through items, as well as can be depressed to make a selection.



# Setting Display to FMM MOMENTUM CAN

- On the Menu Control Switch press and release MENU button



- Use the knob to scroll to SETTINGS and then depress the knob




# Setting Display to FMM MOMENTUM CAN

- Use the knob to scroll to VEHICLE CONFIGURATION and then depress the knob.
- A screen will pop up asking to enter a password. From Autocar there is currently not a password so just press the menu control knob.



# Setting Display to FMM MOMENTUM CAN

- The VEHICLE CONFIGURATION screen will come up
- Scroll over to the FMM Settings using the knob.
- Use the arrows on the menu control switch to go through the FMM settings until you find MOMENTUM CAN

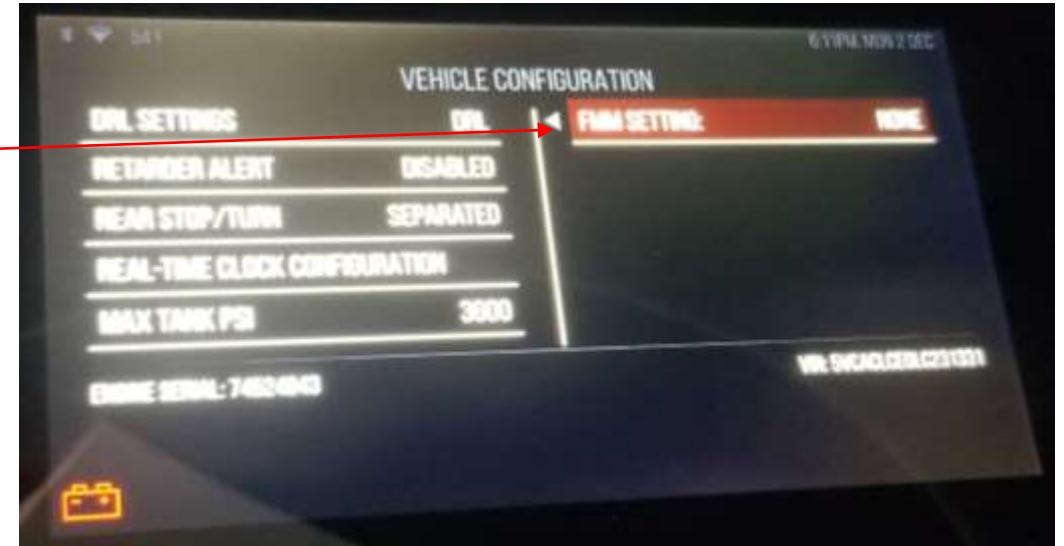



# Setting Display to FMM MOMENTUM CAN

- With the FMM Setting on MOMENTUM CAN, depress the knob and release it.
- Press the EXIT button on the menu control knob and it should take you back to the main screen and have the fuel level displayed.

