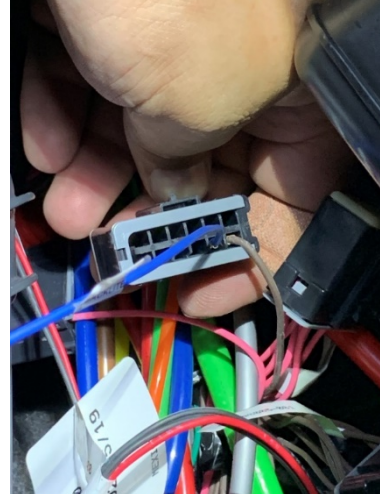


- i. Freightliner, PACCAR, Kenworth, etc. style
2. Locate power, ground, and backlighting splice blocks for fuel gauge under the dash.
3. Crimp new terminals onto positive (red) and negative (black) on the end of the MP92-1031-C harness.



*Figure 3: Ground Splice*



*Figure 3: Gauge Dimmer*



*Figure 3: Switched Power Gauge Block*

- a. Power connection needs to be switched power
4. Install the black ground wire of the MP92-1031 to the truck side of the splice block
5. Install the blue analog backlight to dimmer terminal splice block.
6. Install red power wire to a switched power splice block under dash.
7. Clean up wiring with zip ties and reassemble the dash after installing fuel gauge harness into the backside of the gauge assembly.